

business voice

Cisco IP Phone DECT 6825



Your Phone

- 1)- Indicator light (LED)
- 2) Emergency button
- 3)- Headset port

)- Softkeys, phone control buttons (Speaker, Menu), Navigation cluster, call control buttons (Answer/Send, Power/End)



- Volume and Mute buttons

Turn On The Handset

Press and hold **Power/End** the screen turns on.

Turn Off The Handset

Press and hold **Power/End** until the screen turns off.

Lock the Handset Keypad

Note: When the keypad is locked, you can only dial emergency numbers.

Press and hold **Asterisk** ** until the message "Press and hold *" is displayed on the screen.

Unlock the Handset Keypad

Press and hold **Asterisk** ** until the message "Press and hold *" doesn't display on the screen.

Place a Call

1. When your handset is idle, enter the phone number with the keypad.

2. Press Answer/Send 🕓

Answer a Call

Press Answer/Send 🔽 .

Put a Call on Hold

- 1. From an active call, press Hold.
- 2. Press **Resume** to pick the call back up.

Transfer a Call

1. From an active call, press Transfer.

2. Enter the coworker's number and press **Answer/Send** .

3. Press **Transfer** before or after the coworker answers.

View Your Recent Calls

1. Press Recents.

2. Press right or left on the Navigation ring Uto view different lists.

(All, Missed, Received, Placed)



Listen to Voice Messages

Mute Your Audio

1. Press Mute 🕚 .

2. Press Mute again to turn mute off.

Adjust the Volume in a Call

Press Volume + - up or down to

adjust the handset, headset, or speakerphone volume when the phone is in use.

Adjust the Ringtone Volume

While the handset is ringing, press Volume

(+ -) up or down.

Change Ringtone

- 1. Press Menu 🗧 .
- 2. Select Settings.
- 3. Select Audio Settings > Ring Melody.

4. Scroll through the list of ringtones and

press Play to hear a sample.

5. Press Set and Apply to save a selection.

Set Do Not Disturb

1. Press Menu 🔳 .

2. Select Settings > Do Not Disturb.

3. highlight your choice.

- Disabled (default)

- Enabled

4. Press Select to save the setting.

Set the Coverage Warning

- 1. Press Menu 🗮 .
- 2. Select Settings > Audio Settings.
- 3. Highlight Coverage warning.
- 4. Do one of these actions.
 - Press **Off** to stop the tone.
 - Press **On** to play the tone.

